

FIG. 3A

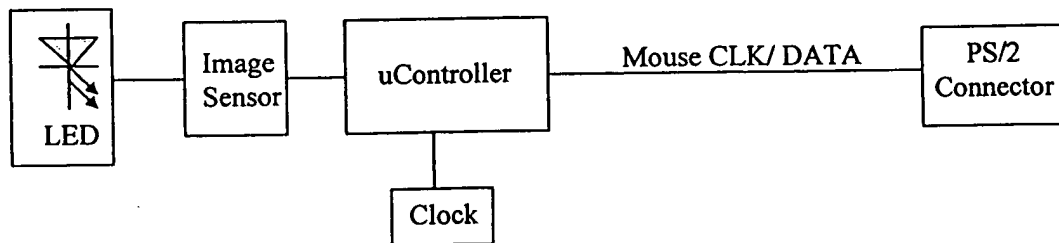


FIG. 3B

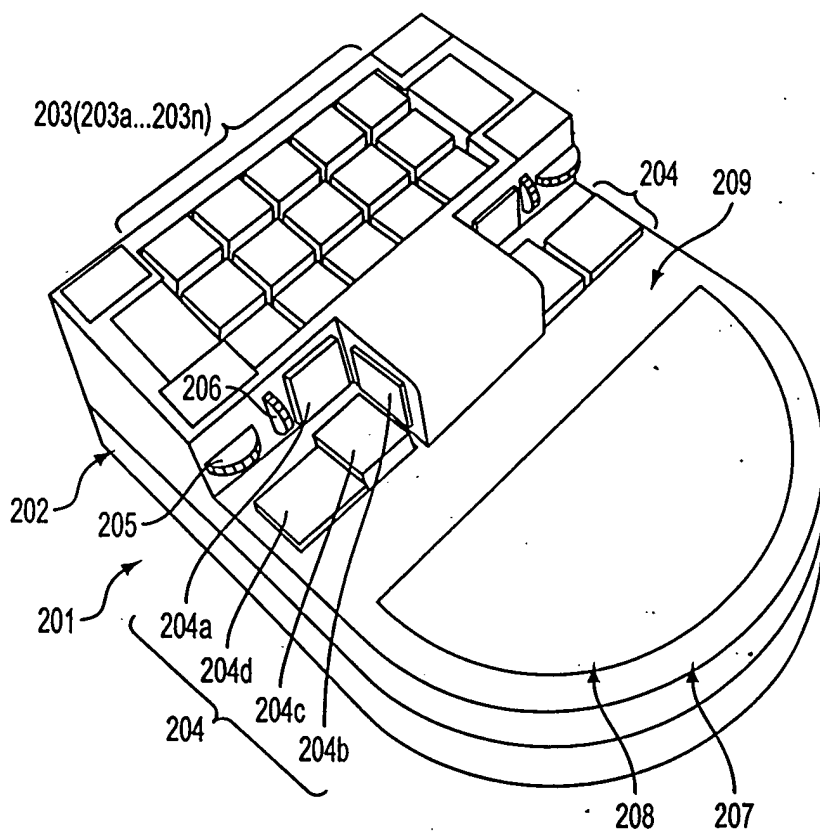


FIG. 4

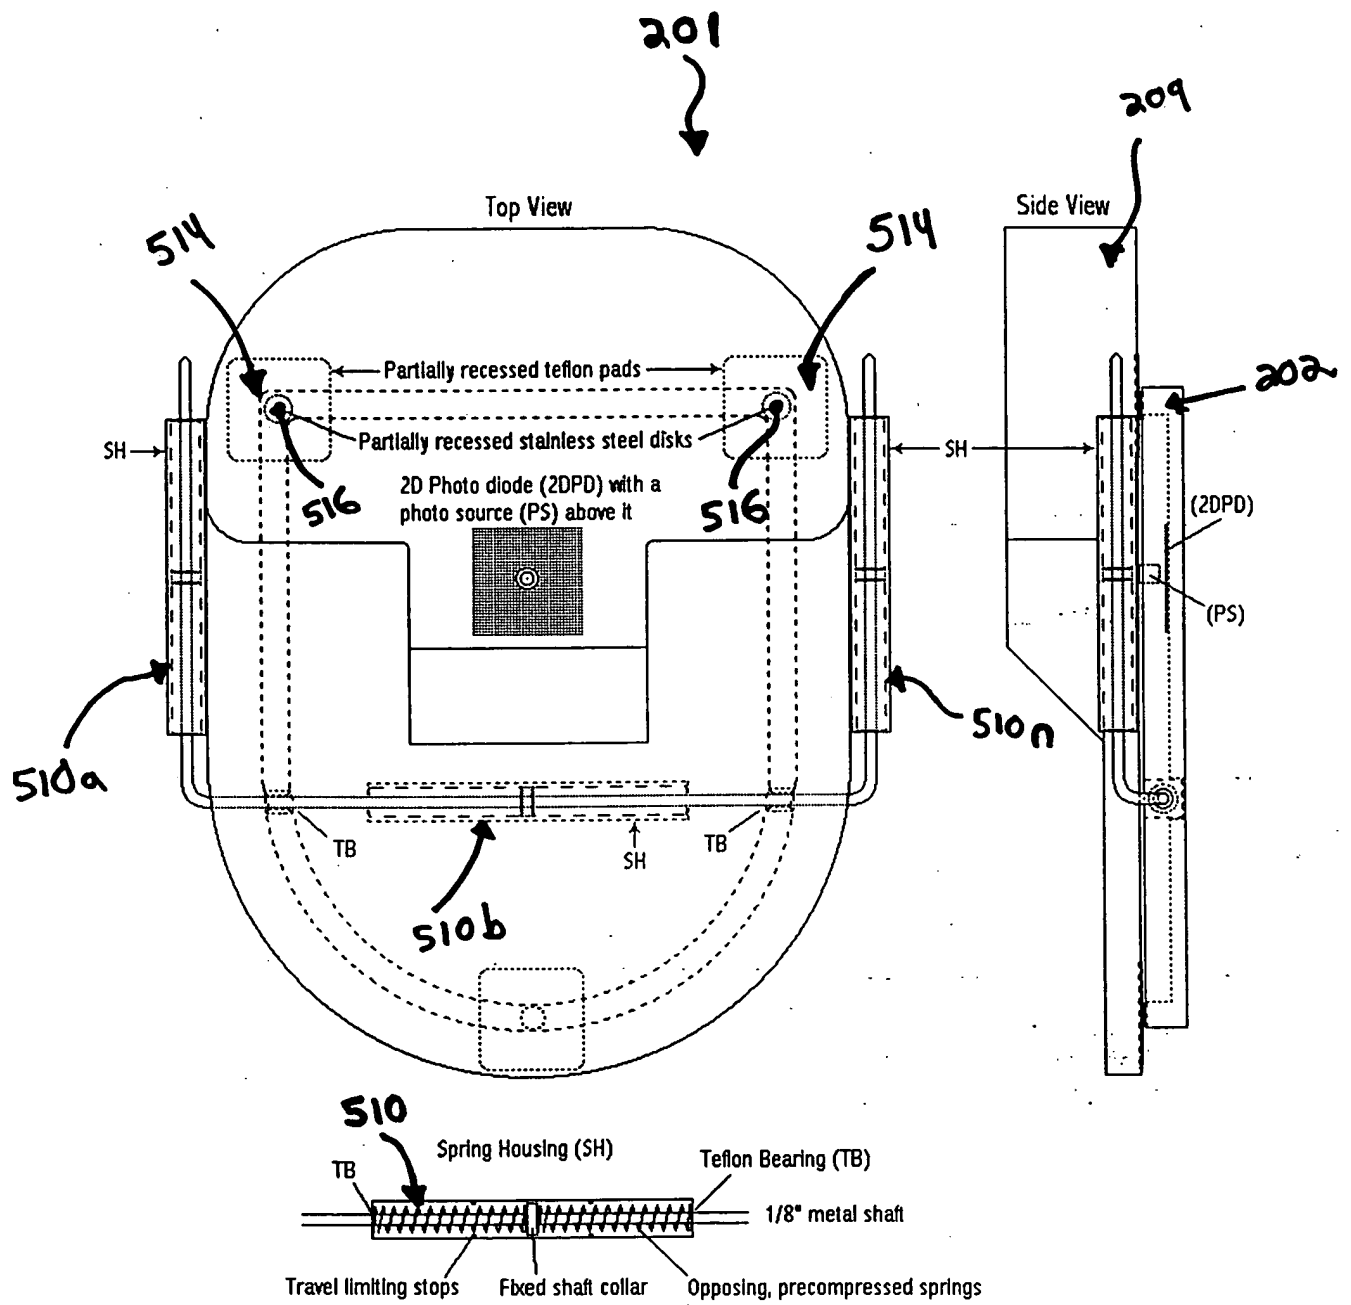


FIG. 5



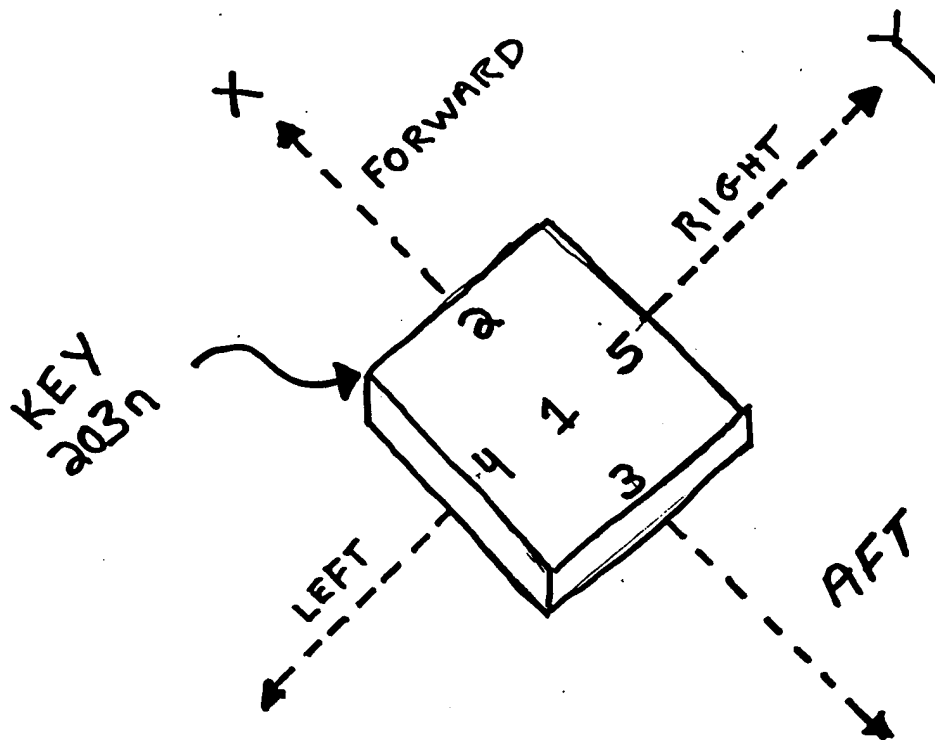


FIG. 6

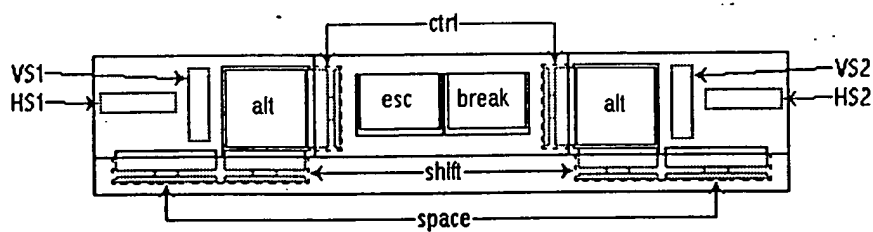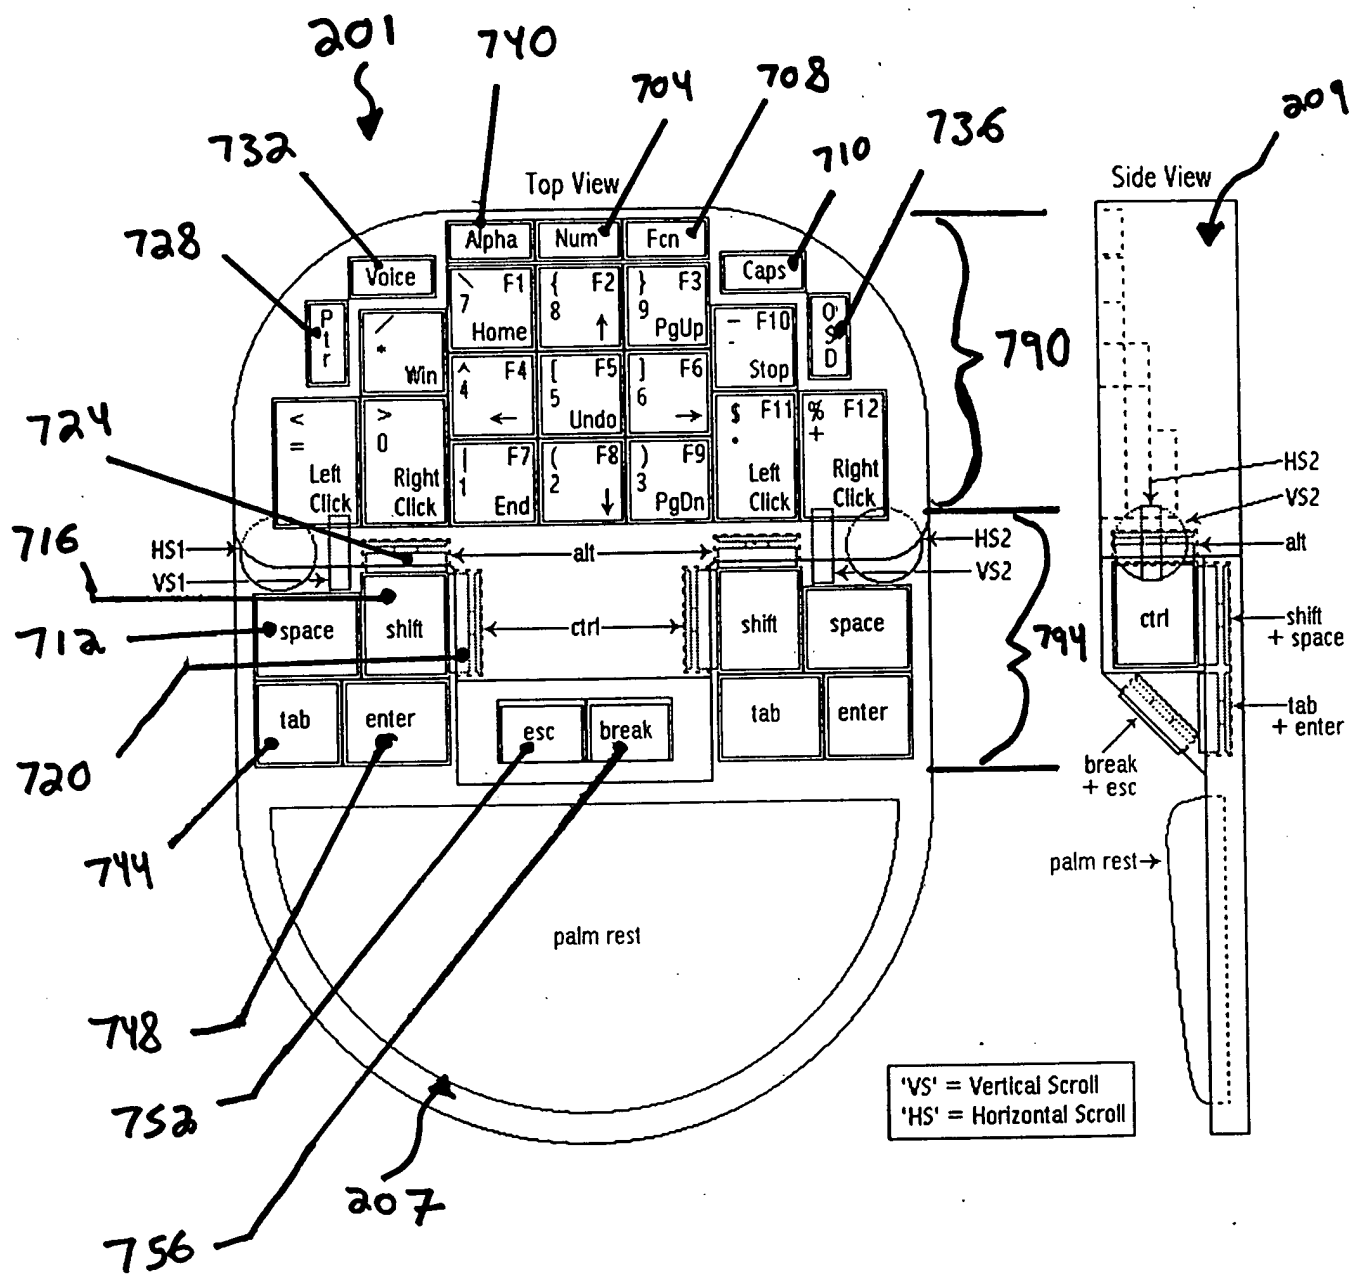

Palm Rest, Tab and Enter Keys are Cut Away. Finger Keys are Hidden and Not Shown.

FIG. 7

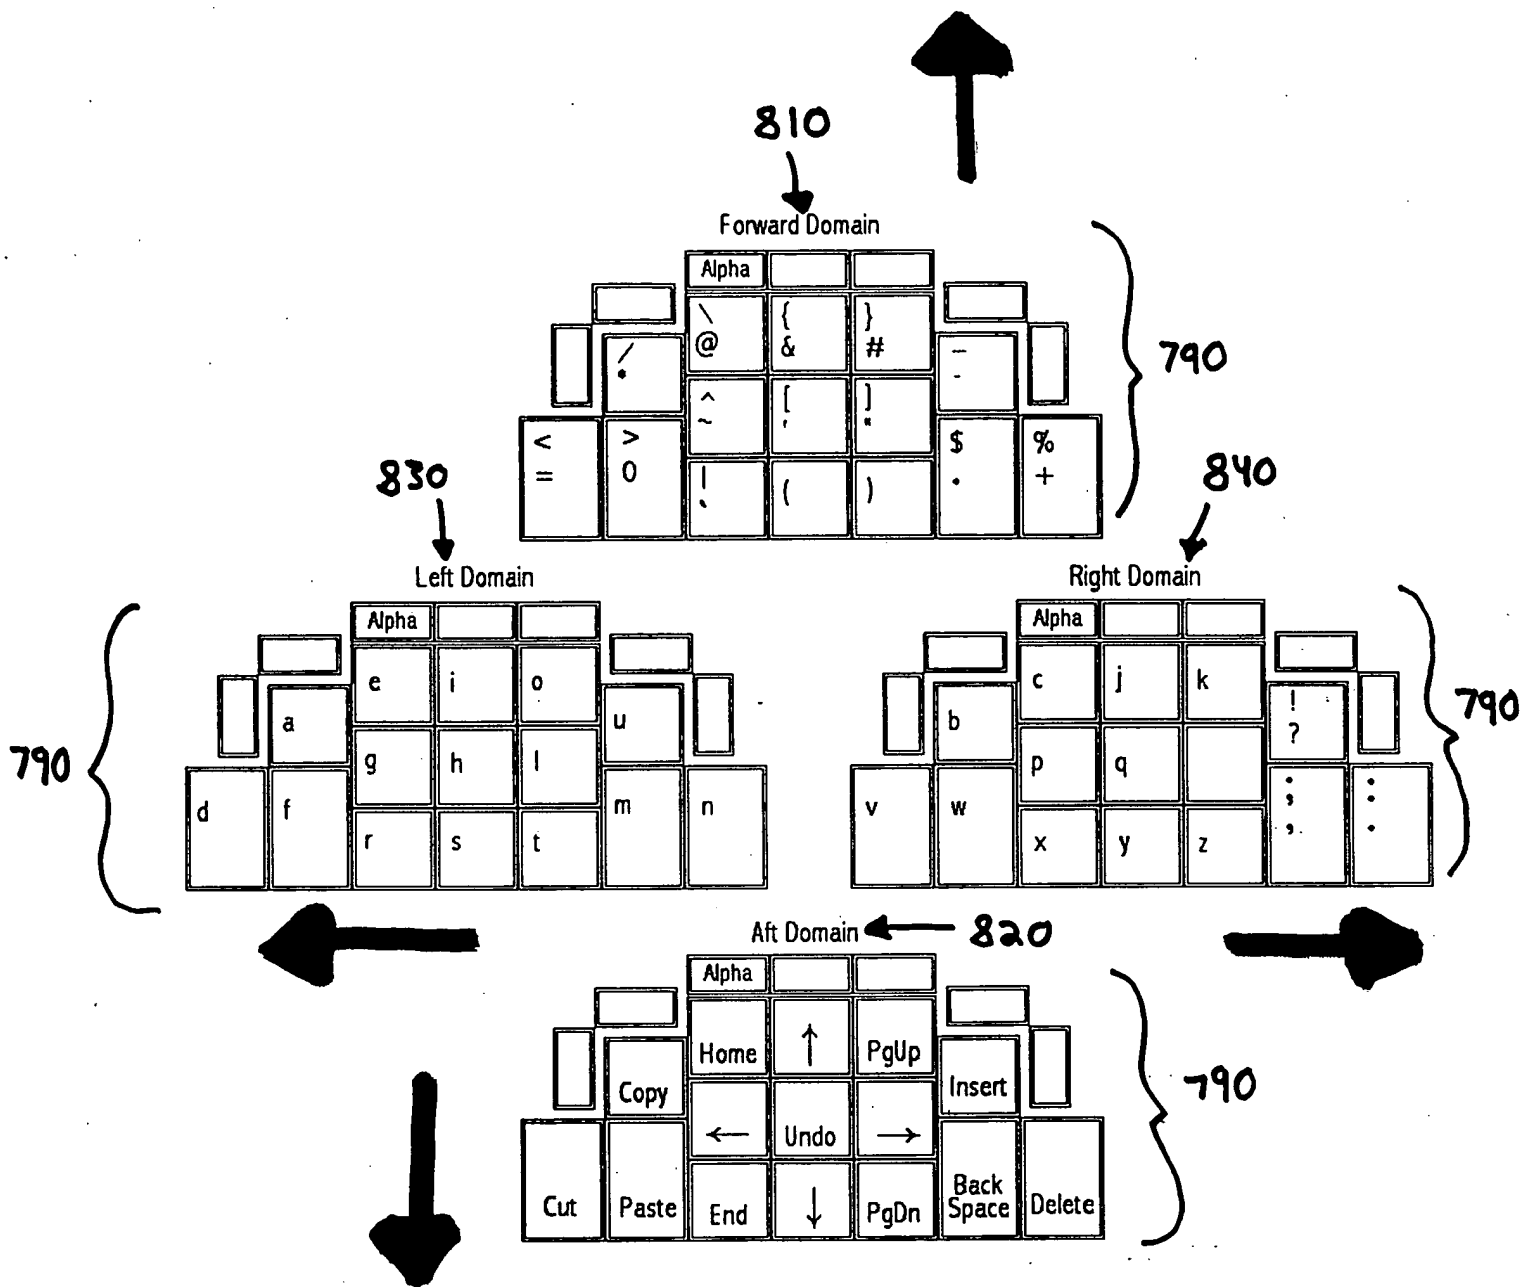


FIG. 8



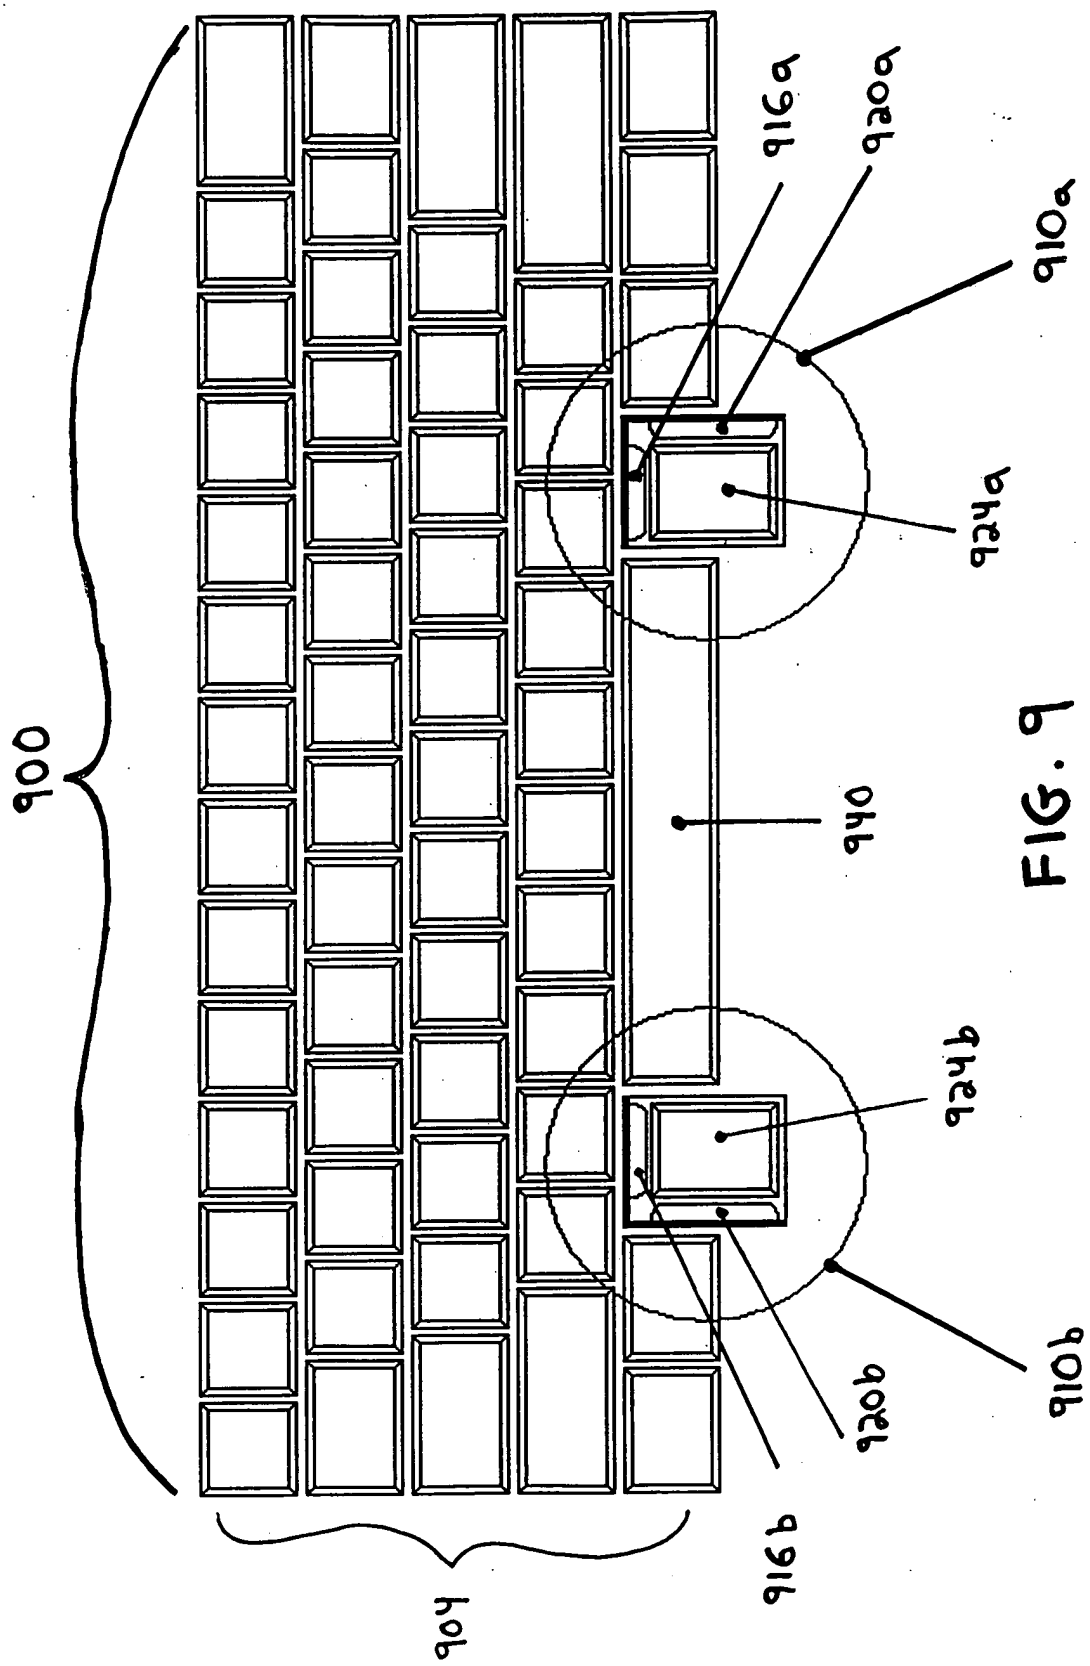


FIG. 9

